XMODS™ Custom RC

Wheel Upgrade 60-8521

Customize the look of your vehicle with high performance wheels. This kit includes three (3) sets of custom wheels, 12 lug nuts, and one lug nut wrench. Before installing, turn off your vehicle and controller, and detach the car body for easier access.

1. Use the supplied **lug nut wrench** to detach the **lug nuts** from each **wheel**.
2. Remove a **wheel** from the axle.
3. Remove the **tire** from the old **wheel** and place it on a new **wheel**.

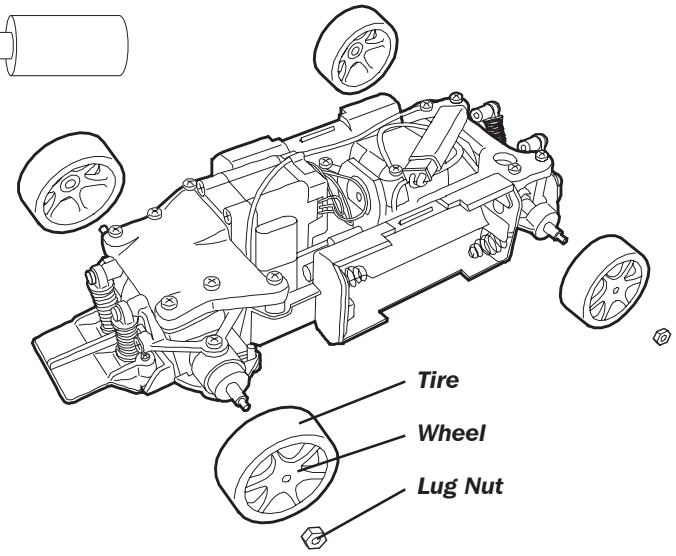

4. Align the flat side of the **wheel** with the flat side of the axle and slide the **wheel** onto the same axle.
5. Screw the **lug nut** onto the axle and tighten with the supplied **lug nut wrench**.
6. Repeat steps 2-5 for each **wheel**.

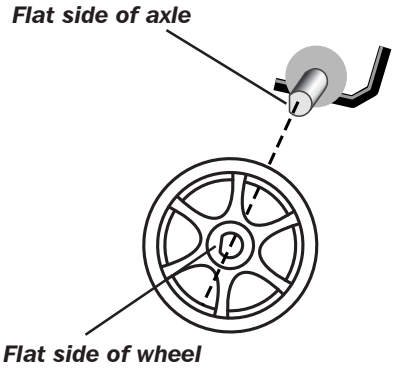

©2004 RadioShack Corporation
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

Printed in China
03A04